


2 WIRE SYSTEM

DT243-D4

4.3" COLOR TFT MONITOR

USER MANUAL

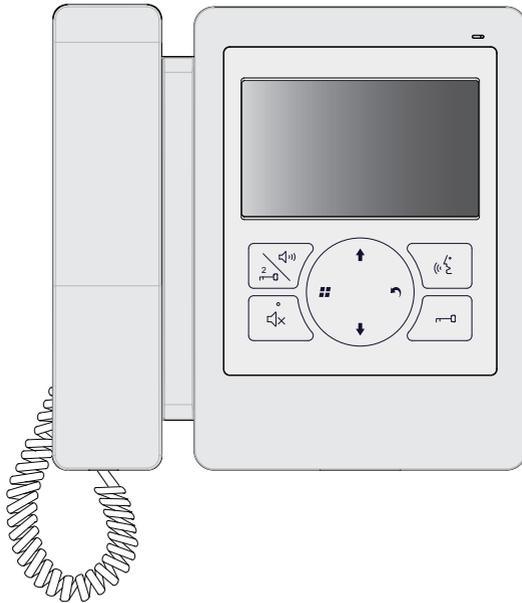


- Please read this manual carefully before using the product you purchase, and keep it well for future use.
- Please note that images and sketch maps in this manual may be different from the actual product.


CONTENTS

1. Part And Functions	1
2. Mounting	2
3. Main Menu	2
4. Basic Door Release Operation	2
5. Monitoring Door Station / Camera	3
6. Intercom Function	4
7. Entrance Playback	5
8. No Disturb Function	5
9. Divert Call	6
10. Opening Staircase Light	6
11. Setup Function	7
12. Monitor Parameter Setting	7
13. Basic Connection	11
14. Screen and Volume Adjustment	11
15. Specifications	12

1. Parts And Functions

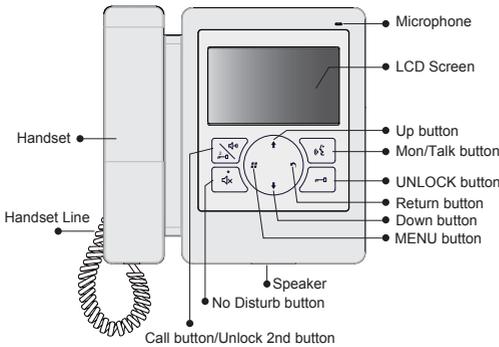


Front view

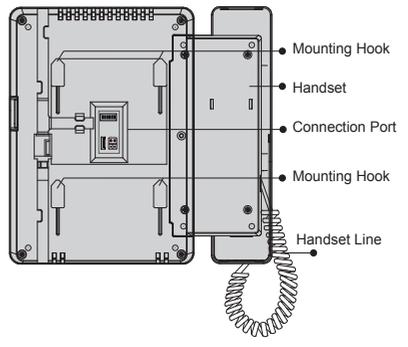

Back view

Terminal Description

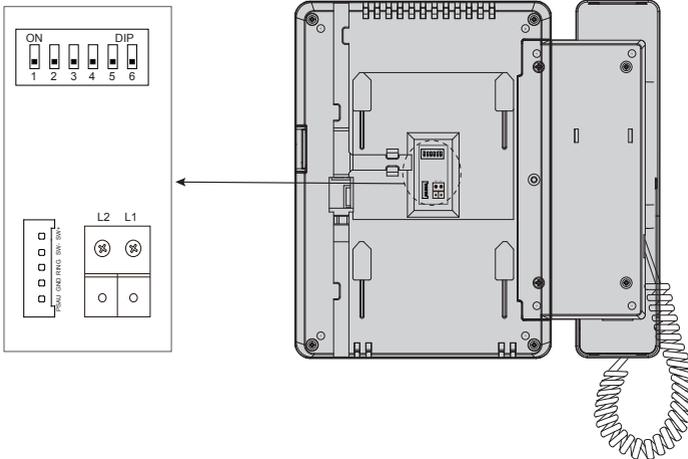

SW+,SW-: Door bell call button connection port.

RING,GND: Extra buzzer connection port.

PSAU: Reserved.



L1,L2: Bus terminal.

DIP switches: Total 6 bits can be configured.

Bit1~Bit5: Used to User Code setting.

Bit6: Set to ON if the monitor is at the end of the line or works with DBC4A1. Otherwise, set to OFF.

2. Mounting

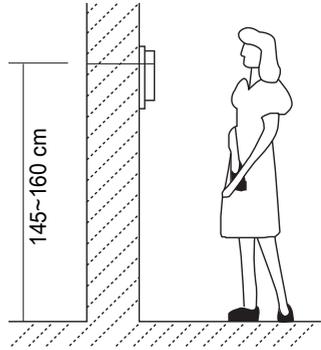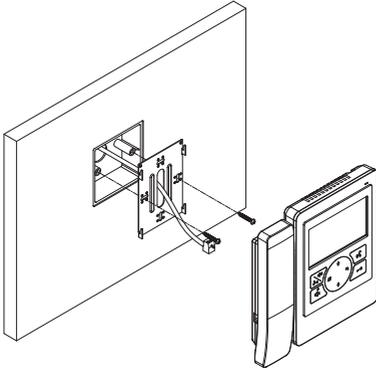

1. Use the screws to fix the Mounting Bracket on the mounting box.(fitting accesories includes a Bracket (Two pieces of 4X25 screws are needed for fastening the Mounting Bracket), Special 2 wire connectors to connect with Monitor)
2. Wire the system correctly(see the later connection chapter) then hang the Monitor on the Mounting Bracket firmly.

3. Main Menu

Press **Menu** button, in standby mode, the main menu page will be shown as follows:



4. Basic Door Release Operation

1. Press **CALL** button on outdoor station, the Monitor rings, meanwhile, the screen displays the visitors' image.
2. Pick up handset (or press **Mon/Talk** button on panel), you can communicate hands free with the visitor for 90 seconds. After finishing communication, hand up the handset (or press



⏪ ⏩ **Mon/Talk** button again/or press **Return** button) to end the communication. If nobody answers the phone, the screen will be turned off automatically after 40 seconds.

3. During talking state, Press **Unlock** button to release the first door. If the system connect 2 locks, press **Call button/Unlock 2nd** button to open the second door.

5. Monitoring Door Station / Camera


You can monitor the entrance at any time via the monitor.

1. Press **Menu** button on the panel in standby mode.
2. Select **Monitor by Select** item on main menu page, and then press **Menu** button to enter **Select a Camera** page.

*Note: Press **Mon/Talk** button on panel in standby mode to monitor the master door station in shortcut.

Monitoring door stations/cameras:

DS1~4 and CAM1~4 can be selected to monitor individually if the system installs multi door stations/cameras. See the following steps:

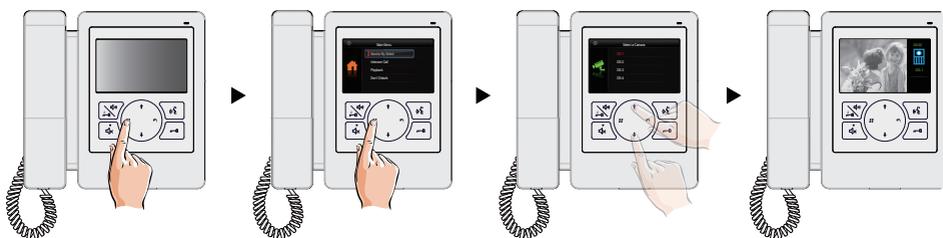

* Use **↑** / **↓** button to move upward / downward to select the item you want.

* During monitoring, images can be viewed, but audio cannot be heard.

* If there is a visitor at the entrance, press **Mon/Talk** button on panel to begin communication with door station.

6. Intercom Function


When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **Up / Down** button to move upward / downward to select **Intercom Call** item, press **Menu** button to enter the select intercom page, you have 3 items to select.

*Note: Press **Call button/Unlock 2nd** button on panel in standby mode to enter the select intercom page in shortcut.

Namelist Call: User in one apartment can call other apartments in the system. the namelist will be created automatically by the system. Use **Up / Down** button to select a name on the screen then press **Menu** button to call. (Note: 1. Press "MENU" button again to redial. 2. The DIP switches code of the monitors are not the same.)



Pick up handset, or use **Up / Down** button to select **Intercom Call** item, then press **Menu** button to confirm.

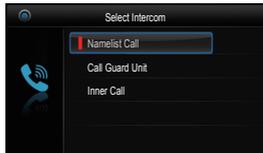

Use **Up / Down** button to select **Namelist Call** item, then press **Menu** button to confirm.



Use **Up / Down** button to select the item you want, then press **Menu** button to call.



Calling.

Inner Call: If multi Monitors are installed in the same apartment, select Inner Call, all the other Monitors will ring at the same time, whichever Monitor answers the call, conversation is started, and the other monitors will stop ringing at the same time. (note: the DIP switches setting of all monitors must be same.)

Call Guard Unit: A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started.

7. Entrance Playback

When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **Up** / **Down** button to move upward / downward to select **Playback** item, press **Menu** button to confirm, the screen will display the playback page.

*Note: The playback function requires SC6V to support.

8. No Disturb Function


If you don't want to be disturbed, for example, at night. Activating the mute function is necessary for you.

When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **Up** / **Down** button to move upward / downward to select **Don't Disturb** item, press **Menu** button to enter the no disturb page, you have 4 items to select.

Follow the steps:



Use **Up** / **Down** button to select **Don't Disturb** item, then press **Menu** button to confirm.

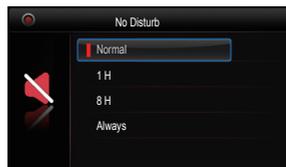

Use **Up** / **Down** button to select the item you want, then press **Menu** button to confirm.

*Note: Press **No Disturb** button on panel in standby mode to enter the no disturb page in shortcut.

9. Divert Call

When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **↑ / ↓** button to move upward / downward to select **Divert Call** item, press **Menu** Button to enter the call divert options page, you have 4 items to select. Follow the steps:



Use **↑ / ↓** button to scroll pages.



Use **↑ / ↓** button to select **Divert Call** item, then press **Menu** button to confirm.



Use **↑ / ↓** button to select the item you want, then press **Menu** button to confirm.

1. **No Divert**---calls from outdoor station will not be diverted.
2. **If No Answer**---Calls from outdoor station without respond in 30 seconds will be transfer to the number you set.

Even though the monitor will shut off when transfer via GSM/TPS, you still available to operate it (such as monitor, talk, and unlock).

3. **Simultaneously**---Calls from outdoor station will be diverted to your telephone immediately. At this mode, the monitor won't shut off when GSM/TPS divert successfully, but if the monitor answers the call at this time, GSM/TPS will quit absolutely.
4. **Setup Tel Numbers**.----Select this item to edit the divert numbers you want.

10. Opening Staircase Light

When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **↑ / ↓** button to move upward / downward to select **Light** item, press **Menu** button to enter the light option page, you have 3 items to select.



Use **↑ / ↓** button to scroll pages.



Use **↑ / ↓** button to select **Light** item, then press **Menu** button to confirm.



Use **↑ / ↓** button to select the item you want, then press **Menu** button to confirm.


1. **Turn On**: Select it to open the staircase light, the staircase light will be turned off automatically after 60 seconds.
 2. **Turn On 5min**: Select it to open the staircase light, the staircase light will be turned off automatically after 5min.
 3. **Turn Off**: Select it to close the staircase light.
- *Note: the staircase light function will be activated only when the system connect light via DT-RLC module, otherwise, this function is invalid in normal. For more information, please refer to DT-RLC user instruction in detail.

11. Setup Function

When the monitor is in standby mode, press **Menu** button to enter main menu page. Use **Up** / **Down** button to move upward / downward to select **Setup** item, press **Menu** button to enter the user setup page, you have 4 items to select.



Use **Up** / **Down** button to scroll pages.

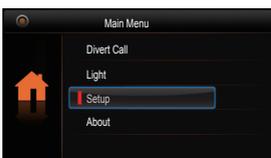

Use **Up** / **Down** button to select **Setup** item, then press **Menu** button to confirm.




Use **Up** / **Down** button to select the item you want, then press **Menu** button to confirm.


1. **Ring Tune**: Select it to set the tune of Door Station, Intercom and Door Bell.
2. **Ring Volume**: Select it to set the volume of monitor.
3. **Monitor Time**: Select it to set monitor time.
4. **Language Select**: Select it to set the language.

12. Monitor Parameter Setting

12.1 How to enter the installation setting page

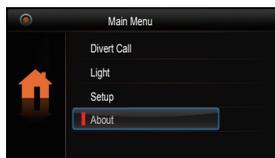

Use **Up** / **Down** button to select **About** item, then press **Menu** button to confirm.

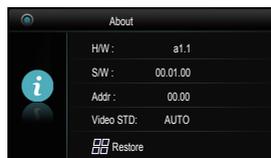


Press **Unlock** button and hold for 3s.



Use **Up** / **Down** button to increase/decrease the value you want, and press **Menu** button to confirm.

12.2 Restore to Default

The restore to default function allows the user to recover the settings to factory setting. Follow the steps:

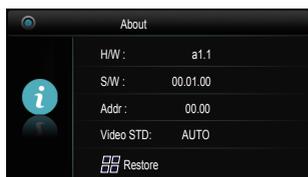

Press **⏏** Menu button on About page.



Press **⏏** Menu button to confirm.

12.3 The setting items and codes

Code	Setting Item	Code	Setting Item
2412	Reset To Default Setting	8010-8011	Unlock Mode:Close/Open
2499	Restore Factory Settings	8016-8017	Bypass Enable/Disable
8000	Master Monitor	8018-8020	Video Display Standard
8001~8003	Slave Monitor	8201-8209	Unlock Time
8004-8005	Guard Unit / Not Guard Unit	9004-9005	Door Station Use Unified /Independent ringtones
8006-8007	Setting Slave Monitor Panel On/Off	9015-9016	Enable/Disable Intercom Call

12.4 How to set the monitor as a Guard Monitor

A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started..

The code number of 8004 is used to set the monitor as a guard unit monitor and 8005 is used to cancel this function.

12.5 How to set the slave monitor address

Maximum 4 monitors can be connected in one apartment, one master monitor together with 3 slave monitors, so you should set the address correctly. (note: must have one monitor to be set as master monitor)

The code of 8000 is used to set the master monitor.

The code of 8001 is used to set the first slave monitor.

The code of 8002 is used to set the second slave monitor.

The code of 8003 is used to set the third slave monitor.

12.6 How to set the monitor panel on

In default mode, when receive a calling, the master and slave monitors will ring at the same time, and just the master monitor can display the image while the slave monitors can not. But the settings can be changed, you can set the master monitor and all the slave monitors to panel on at the same time when receiving a call, just input the code number of 8006 on each slave monitor.

Press call button
on door station



When receiving calling, all monitors can display the image at the same time



Master monitor



slave monitor

12.7 How to set the unlock parameter

Unlock mode:

There are two unlock modes: 1. power-on-to-unlock type: unlock mode=0 (by default)

2. power-off-to-unlock type: unlock mode=1.

The code number of 8010 is used to set the unlock mode to 0

The code number of 8011 is used to set the unlock mode to 1

Unlock time:

The unlock time can be changed by yourself at any time. It can be set from 1 to 9 seconds.

The code number from 8021 to 8029 are used to set the unlock time to 1~9 seconds.

12.8 User Code Setup

In the DT system, every apartment must have a unique identification called User Code. The DIP switches are used to configure the User Code for each Monitor.

- Bit-1 to Bit-5 are used to User Code setting. The value is from 1 to 32, which have 32 different codes for 32 apartments.
- When multi Monitors are installed in one apartment, these Monitors have to use the same User Code setting, and the Master/Slave mode should be set on the Monitor.
- Bit-6 is line terminal switch, which have to be set to ON if the Monitor is in the end of the line (bus), otherwise set to OFF. The end of the line is terminal that no other section will start from it.


Bit-6 line terminal setting:



Bit state	Setting	Bit state	Setting
	Monitor not at the end of the line.		Monitor at the end of the line.

Bit state	User Code	Bit state	User Code	Bit state	User Code
	Code=1		Code=12		Code=23
	Code=2		Code=13		Code=24
	Code=3		Code=14		Code=25
	Code=4		Code=15		Code=26
	Code=5		Code=16		Code=27
	Code=6		Code=17		Code=28
	Code=7		Code=18		Code=29
	Code=8		Code=19		Code=30
	Code=9		Code=20		Code=31
	Code=10		Code=21		Code=32
	Code=11		Code=22		

13. Basic Connection

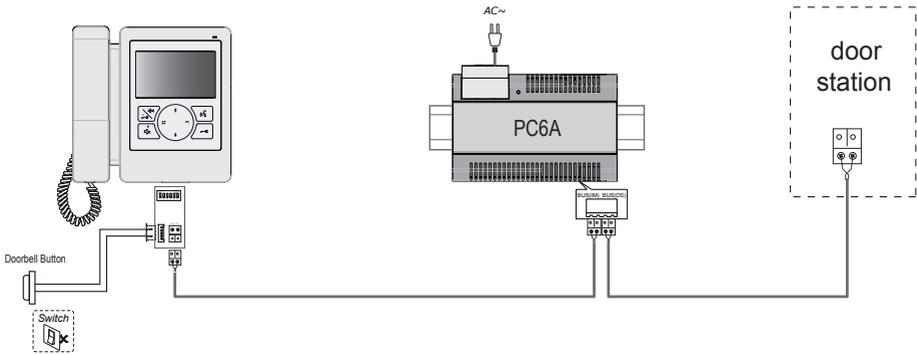

14. Screen and Volume Adjustment

During monitoring or talking, press **Menu** button, the *ADJUST MENU* will be displayed.

Use **Menu** button to select the adjustment item; use **Up** / **Down** button to decrease / increase the value, press **Return** button to quit the adjust page.

1. Total 4 screen modes can be selected in sequence: *Contrast*, *Bright*, *Color* and *Volume*.
2. The *Bright* and *Color* item is for the image quality setting, adjust the value to get the best image you like.
3. The *Volume* items are ring tone and talking volume adjustment.



15. Specifications

- Power supply for indoor monitor: DC 20~28V
- Power consumption: Standby 0.17W; Working status 3.5W
- Monitor screen: 4.3 inch digital color TFT
- Display Resolutions: 480(R, G, B) x 272 pixels
- Video signal: 1Vp-p, 75Ω, CCIR standard
- Wiring: 2 wires, non-polarity
- Monitor time: 40 seconds
- Talking time: 90 seconds
- Dimensions: 186(H) × 191(W) × 37(D)mm

The design and specifications can be changed without notice to the user. Right to interpret and copyright of this manual are preserved.